

Important: Hot Tub How to Operate

Follow the safety and hygiene rules displayed. DROWNING RISK! HYPERTHERMIA RISK!

The hot tub is a VERY EXPENSIVE piece of equipment, it is the user's responsibility not to damage it and to READ AND FOLLOW ALL OF THESE GUIDELINES.

The hot tub is designed to be continually on- you cannot switch it off. The lid MUST be closed when not in use. DO NOT climb on the lid.

Operating the lid:


To open the lid first unclip the buckles and fold back the first section flat to give a double layer.



Then lift the folded lid up to its resting position of ninety degrees. The handle with the yellow tape must be held in the raised position whilst this operation is performed. Once the lid is up to ninety degrees, the handle can be allowed to sit in its horizontal position which prevents the lid coming down accidentally.



To close the lid (the lid MUST be closed when the hot tub is not in use), first RAISE the handle with the yellow tape. This is essential. Attempting to lower the lid without doing this will break the mechanism! Whilst holding the handle in the raised position, push the folded lid down from its resting upright position to lay flat. Next unfold the remaining section back to a flat and fully closed position before reattaching the buckles.

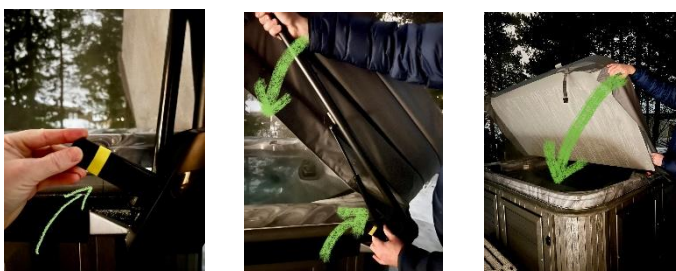

Operating the key pad.

The arrow buttons change the temperature. This generally does not need altered.

There are two pumps. To engage all the jets press pump 1 and 2. After a period of time pump 2 will switch off, pressing it again will restart it. Pump 1 has 2 speed settings. In its lower setting the arrow above pump 1 on the display will flash. In its higher setting the arrow will be solid. Pump 2 has only one speed.

The light bulb button controls the lighting effects

Operating the air throttle

To the right of the key pad when viewed from inside the hot tub, there is a black knob. This can be turned counter-clockwise to introduce a more powerful bubble effect. This knob **MUST** be closed fully by rotating clock-wise before closing the lid.

Operating the waterfall

To the left of the waterfall there is a black knob. Rotating this knob anti-clockwise will increase the power of the waterfall jets. This knob **MUST** be partially closed by turning clockwise to leave a gentle trickle from the waterfall jets before closing the lid.

Seat jets

Seat jets can be rotated on and off but we ask you **NOT** to rotate any of these jet outlets in the seats, please do not adjust these.

Technical Difficulties

In the event of technical difficulties, please contact Hallingdal Rental Hub on

Viktig: Hvordan bruke boblebadet

Følg sikkerhets- og hygienereglene som vises. FARE FOR DRUKNING! FARE FOR HYPERTERMI!

Boblebadet er et veldig dyrt utstyr, det er brukerens ansvar å ikke skade det og LESE OG FØLGE ALLE DISSE RETNINGSLINJENE.

Boblebadet er designet for å være på hele tiden - du kan ikke slå det av. LOKKET MÅ være lukket når det ikke er i bruk. IKKE klatre på lokket.

Betjene lokket:


For å åpne lokket, løsn først spennene og brett tilbake den første delen slik at den ligger flatt og gir et dobbelt lag.



Løft deretter det brettede lokket opp til sin hvileposisjon på nitti grader. Håndtaket med den gule teipen må holdes i hevet posisjon mens denne operasjonen utføres. Når lokket er oppe til nitti grader, kan håndtaket tillates å sitte i en horisontal posisjon som forhindrer at lokket kommer ned ved et uhell.



For å lukke lokket (lokket MÅ være lukket når boblebadet ikke er i bruk), løft først håndtaket med den gule teipen. Dette er VIKTIG. Å forsøke å senke lokket uten å gjøre dette vil ødelegge mekanismen! Mens du holder håndtaket i hevet posisjon, skyv det foldede lokket ned fra sin oppreiste hvilestilling slik at det legges flatt. Deretter utfold den gjenværende delen tilbake til en flate og fullt lukket posisjon før du fester spennene igjen.

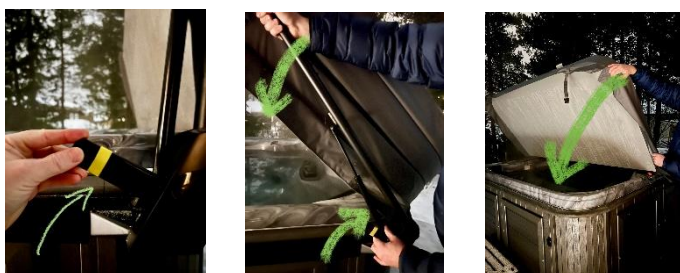

SIDE 1 AV 2



Betjening av tastaturet.

Pilknappene endrer temperaturen. Dette trenger vanligvis ikke endres.

Det er to pumper. For å aktivere alle dysene, trykk på pumpe 1 og 2. Etter en periode vil pumpe 2 slå seg av, trykk på den igjen for å starte den på nytt. Pumpe 1 har 2 hastighetsinnstillinger. I sin lavere innstilling vil pilen over pumpe 1 på displayet blinke. I sin høyere innstilling vil pilen være solid. Pumpe 2 har bare én hastighet.

Lyspæren kontrollerer lyseffektene.

Betjening av luftregulatoren

Til høyre for tastaturet når det sees fra innsiden av boblebadet, er det en svart knott. Denne kan dreies mot klokken for å introdusere en kraftigere bobleeffekt. Denne knotten MÅ være helt lukket ved å rotere med klokken før lokket lukkes.

Betjening av fossen

Til venstre for fossen er det en svart knott. Å dreie denne knotten mot klokken vil øke kraften på fossestrålene. Denne knotten MÅ være delvis lukket ved å dreie med klokken for å etterlate en forsiktig sildring fra fossestrålene før lokket lukkes.

Setedyser

Setedyser kan roteres av og på, men vi ber deg IKKE rotere noen av disse jetuttakene i setene, vennligst ikke juster disse.

Tekniske problemer

Ved eventuelle tekniske problemer, vennligst kontakt utleiebyrået på